


Distributor use only

About our Microfibre Cloths and Eraser

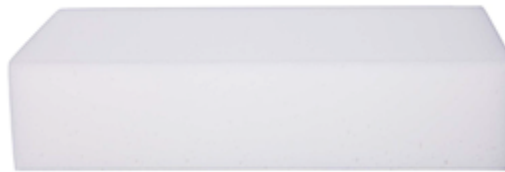

Composition:

Nature Direct microfibre cloths are made from 80% Polyester and 20% Polyamide Lyophilic and are great at attracting and holding grease and oil. Polyamide attracts and holds dirt that is soluble in water.

To wash, place cloth inside a laundry bag and wash in the washing machine at no more than 40 degrees Celsius. Don't use bleach or fabric softener in the load as bleach breaks down the fibres and fabric softener 'clogs' the microscopic hooks. Hang on the line to dry. Each of our cloths should last for around 300 washes, which is generally 12 months.

The Eraser is made from melamine foam. It is excellent for hard to remove stains, including grease and grime. The Eraser breaks up tough 'ground in' dirt and removes stains from grout and scuff marks.

***Warning:** The Eraser must not be used on composite stone bench tops, marble bench tops, Laminex bench tops and cupboard fronts (or similar), white goods (fridges, dishwashers, washing machines and dryers), coloured kitchen appliances, motor vehicles duco or paint.)

Please test in an inconspicuous area before using, in GOOD LIGHT and always wet and wring out excess water before use. Do not use dry.

Cloth name	Size	Uses	How to use
All Purpose Cloth	40cm x 40cm Edges are double stitched to prevent shrinkage. Designed to withstand up to 300 washes with correct care.	Easy and safe to use on all kitchen surfaces, crockery, cutlery and glassware. Soft enough to use on your fine crystal glasses.	Spray surface with your choice of Nature Direct cleaning solutions, leave for the required time and wipe surface with the All Purpose Cloth.

Cloth name	Size	Uses	How to use
Stay-Fresh Dish Cloths	30cm x 30cm 2 Cloths per Pack. Edges are double stitched to prevent shrinkage. Designed to withstand up to 300 washes with correct care.	Easy and safe to use on all kitchen surfaces, crockery, cutlery and glassware. Soft enough to use on your fine crystal glasses.	Use in conjunction with any Nature Direct cleaning solution.
Stainless-Steel Cloth	40cm x 40cm Edges are double stitched to prevent shrinkage. Designed to withstand up to 300 washes with correct care.	Safe to use on all stainless-steel surfaces.	Use together with any Nature Direct cleaning solution. Always test on inconspicuous area first.
Polishing Cloth	40cm x 40cm Edges are double stitched to prevent shrinkage. Designed to withstand up to 300 washes with correct care.	Designed with a rough side for cleaning and a smooth side for polishing, our Polishing Cloth will leave a scratch-free and streak-free finish, and buff while it cleans.	Use in conjunction with Glass Cleaner and Polisher.
Duster Cloth	40cm x 40cm Edges are double stitched to prevent shrinkage. Designed to withstand up to 300 washes with correct care.	Safe to use on glass, chrome, wood, highly-polished two-pack painted surfaces, LED screens and crystal.	Can be used dry to swish away dust on lamp shades and other delicate surfaces or damp with our Glass Cleaner and Polisher. If using with Glass Cleaner and Polisher, do not spray solution directly onto electronic equipment. Instead, spray lightly onto cloth surface.
Shower Cloth	40cm x 40cm Edges are double stitched to prevent shrinkage. Designed to withstand up to 300 washes with correct care.	Safe to use on all bathroom surfaces including glass, ceramic tiles, composite stone and metal surfaces.	Use in conjunction with your choice of Nature Direct cleaning solution. Spray surface, let sit for 1-2 minutes, then agitate with the scrubbing side and wipe with the smooth

			<p>side. For that extra shine, spray with Glass Cleaner and Polisher and polish with a Polishing Cloth.</p> <p>Always test on an inconspicuous area first.</p>
--	--	--	---

Cloth name	Size	Uses	How to use
<p>Tough Guy Cloth</p>	<p>40cm x 40cm Edges are double stitched to prevent shrinkage. Designed to withstand up to 300 washes with correct care.</p>	<p>Great for ovens, barbeques and hot plates.</p>	<p>Spray greasy, grimy area with Super Strength Cleaner. Let sit for 2 – 3 minutes and agitate with rough side of the Tough Guy Cloth. Wipe clean with smooth side. Repeat as required.</p> <p>Always test on an inconspicuous surface first.</p>
<p>Eraser</p> <p>ALWAYS WET AND WRING OUT EXCESS WATER BEFORE USE.</p> <p>DO NOT USE DRY.</p>	<p>N/A</p>	<p>Powerful and safe to use on oven glass doors, light switches, bathtubs, glass shower screens, tiles and grout.</p>	<p>Spray surface with your choice of Nature Direct cleaning solution, leave for 1-2 minutes and wipe gently with a piece of Eraser *.</p> <p>Always test on inconspicuous patch first.</p> <p>To clean grout, spray surface with Super Strength solution and leave for 5 minutes, then agitate along the joins with the Eraser.</p>